

Instruction Manual

D4RF Series

Contact Ramco today for technical and application support



OPTEX FA CO., LTD.

- . Thank you for purchasing this Digital Fiber Amplifier D4RF.
- . Before using this product, please read this manual carefully to ensure proper use.
- . Read this manual thoroughly, and then keep this manual at hand so that it can be used whenever necessary.

Safety Precautions

Safety precautions for ensuring safe operation of this product are displayed as follows with the following symbols.

Precautions listed here describe important information about safety. Make sure to follow them accordingly.

Safety Symbols

MARNING	
A CALITION	I

Indicates that any improper operation or handling may result in moderate or minor injury, and in rare cases, serious injury or death. Also indicates a risk of serious property damage.

Indicates that any improper operation or handling may result in minor injury or property damage.

≜WARNING

Do not disassemble, repair, modify, deform under pressure, or incinerate this product. Doing so may cause injury or fire. This product is not explosion-proof and should not be used around flam-



mable or explosive gases or liquids. Doing so may cause ignition resulting in an explosion or fire. Do not use air dusters or any spray that uses flammable gas around the



Do not install this product in any of the following locations. Doing so may cause a fire, damage, or a malfunction.

- 1. Locations where dust, salt, iron powders, or vapor (steam) is presen 2. Locations subjected to corrosive gases or flammable gases.
- 3. Locations where oil or chemical splashes may occur.
- 4. Locations where heavy vibrations or impacts may occur.
- Locations where the ambient temperature exceeds the rated range. 6. Locations subject to rapid temperature changes (or where condensa
- 7. Locations with strong electric or magnetic fields.
- 8. Outdoor locations or locations subject to direct sunlight

This is a class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take

adequate measures. This product is not intended for use with nuclear power, railways, aviation, vehicles, medical equipment, food-handling equipment, or any application where particular safety measures are required. Absolutely do not use this

product for any of these fields. This product cannot be used in applications that directly or indirectly detect human bodies for the purpose of ensuring safety. Do not use this product as a detection device for protecting the human body.

What to do in the event of a malfunction such as smoke being emitted from the product If you detect any malfunction including emission of smoke, abnormal

smells or sounds, or the product enclosure becoming very hot, immediately stop operating the product and turn off the sensor power. Failure to do so may cause a fire. Repairing the product is dangerous and should in no way be performed by the customer. Contact an OPTEX FA sales representative for repairs

△CAUTION

- Make sure to turn the power off before wiring the cable or connecting/disconnecting the connector. Connecting or disconnecting while energized may damage the prod uct or cause electric shock
- Avoid using the transient state while the power is on (300 ms). Output could become unsta ble, causing unexpected operation.
- Do not place wires with this product near a high voltage cable or power line. Doing so may cause malfunction or damage by induction
- Do not bend the cable when below the freezing point. This may cause the cable to break
- Do not drop the product or subject the product to strong impacts. Doing so may damage the product.
- Follow the instructions in this manual or the specified instruction manual when wiring th product or the dedicated controller for the correct wiring method. Incorrect wiring can dam age the product or the controller, or cause a malfunction
- When disconnecting the connector, be careful not to touch the terminals inside the connect tor, and do not allow foreign objects to enter the connector.
- Install this product as far away as possible from high-voltage equipment, power equipmen equipment that generates large switching surges, inverter motors, welders, or any equip
- When connecting or disconnecting the cable, make sure to hold it by the connector portion and do not apply excessive force to the cable.

NOTICE

- After carefully considering the intended use, required specifications, and usage conditions, install and use the product within the specified ranges.
- · All specifications may be changed without notice.
- . When using this product, it is the responsibility of the customer to ensure necessary safety designs in hardware, software, and systems in order to prevent any threat to life, physical health, and property due to product malfunction or failure.
- Do not use this product for the development of weapons of mass destruction, for military use, or for any other military application. Moreover, if this product is to be exported, comply with all applicable export laws and regulations, including the "Foreign Exchange and Foreign Trade Act" and the "Export Administration Regulations," and carry out the necessary procedures pursuant to the provisions therein.
- · Before using this product, fully examine the applicable environmental laws and regulations, and operate the product in conformity to such laws and regulations. OPTEX FA does not assume any responsibility for damages or losses occurring as a result of noncompliance with applicable laws and regulations.
- Detection characteristics and digital display values may vary depending on the state of the target object and variations among individual products.


1. Included Items

- · This instruction manual
- · Mounting bracket

2. Dimensions


Amplifier

Unit (mm)

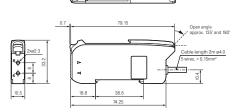


FASTUS

Mounting **Bracket**

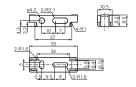


3. I/O Circuit Diagram

NPN setting

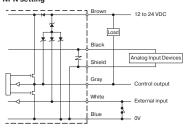

PNP setting or Push-pull

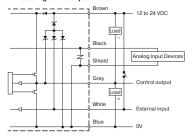

- *1 When I/O polarity is set to Push-pull and the sensor is connected with plus common circuits
- *2 When I/O polarity is set to Push-pull or PNP and the sensor is connected with minus com-

4. Installation

Installing the amplifier

1) Place the groove on the side of fiber unit holes

2 Press down until the hook locks




Removing the amplifier

1) Push the amplifier toward the side of fiber unit holes




Mounting the fiber unit

1) Slide the lock lever down. (2) Insert the fiber wires in the holes to the end.

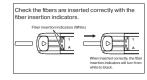


(3) Raise the lock lever to the stop position

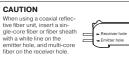


How to use the fiber adapter (Included with the thin fiber units)

- 1 Turn the adapter cap fully counterclockwise to unlock, and then align the ends of adapter pipe and fiber. Turn the cap fully clockwise to lock the adapter.
- 2 Cut the fiber at a desired length, using the fiber cutter included in a free-cut fiber unit.

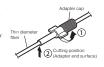

5. Part Names

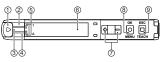

No.	Name	Description
1	Lock lever	Locks and releases the fiber unit.
2	Output 1 indicator (orange)	Illuminates in orange when output 1 is ON.
3	Power indicator (green)	Illuminates in green when the power is turned on.
4	Analog Output indicator (orange)	Illuminates in orange when the object is within the output range of the analog output.
(5)	Fiber insertion indicator	Indicates the insertion status of the fiber unit.
6	OLED display	Displays the present receiving light level and threshold, and the parameters during setting.
7	Selection keys (+/- keys)	Select Channel A: Manually adjusts the span of analog output. Select Channel 1: Manually adjusts the threshold of control outp Setting mode: Selects menu.
8	OK/MENU key	Selects and sets the parameters.
9	ESC/TEACH key	Performs teaching, and exit menu during setting.

6. Menu List

In case "English" is selected in "Language"

Initial menu		Setting value	Default value
1/2	Language	English, 日本語, 简体中文, Espanol, 한국어	English
2/2	Analog output	4-20 mA, 0-10 V, 1-5 V	4-20 mA

	Main menu		Sub menu	Setting value / description	Default value
S1	Output mode (N.O./ N.C.)"			Light on, Dark on, (N.O./ N.C.)	Light on
S3	Response time	1	=	16 μs, 70 μs, 250 μs, 500 μs, 1 ms, 2 ms, 8 ms	250 μs
S4	Timer	1		Not used, On delay, Off delay, On/off delay, Pulse output, On delay pulse, 1 to 30,000 ms	Not used
S6	Display	P1	Display mode ¹²	Value, Percentage, Bar graph, Counter ¹³ , Edge ¹⁴	Value
		P2	Hold display'2	Off, Peak/bottom, Peak, Bottom, Time, On'5	Off
		РЗ	Brightness	10 to 100 % (10% increments)	100 %
		P4	Rotate display	Off, On	Off
		P5	Invert display	Off, On	Off
		P6	Alarm display	Off, On	Off
		P7	Zeroing	Not used, Execute	Not used
		P8	Eco mode	Off, On	Off
		P9	Stretch mode's	Off, On - x10, On - x50	Off
		PA	Language	English, 日本語, 简体中文, Espanol, 한국어	English
		PB	To main menu		
S7	Detection	D1	Hysteresis	1 to 90 %	5%
		D2	Threshold mode	Standard, Edge height, Not used	Standard
		D3	APC	On, Off	On
		D4	ASC	Off, On - standard, On - fast, On - max	Off
		D5	Emitter power	Max, Mid, Min, Auto	Max
		D6	Counter	Off, On	Off
		D7	Set count'3	1 to 16383	10
		D8	Edge direction ¹⁴	Both, Positive, Negative	Both
		D9	Edge offset'4	16 μs: 16 μs to 4080 μs 70 μs: 70 μs to 17850 μs, 250 μs: 250 μs to 63750 μs, 500 μs: 0.5 ms to 127.5 ms 1 ms: 1 ms to 255 ms, 2 ms: 2 ms to 510 ms, 8 ms: 8 ms to 2040 ms	2500 µs
		DA	Edge hys. 14	1 to 9999	5
		DB	To main menu		
S8	1/0	01	I/O polarity	NPN, Push-pull, PNP	NPN
		03	Pin 5 setting	Output 1, Alarm output, Input ack., Out of range, Not used	Output 1
		04	Pin 2 setting	Teach input, Emitter off, Counter reset's, Hold out reset, Load preset, Not used	Teach input
		05	Lock mode	Lock all, Lock keys	Lock all
		06	Preset setting	Preset 1 to Preset 5	-
		07	Load preset	Preset 1 to Preset 5	-
		08	To main menu		
S9	Information	11	Serial number	Manufacturing time.	
		12	Firmware ver.	Firmware version.	
		13	Hardware ver.	Hardware version.	
		14	Temperature	Internal temperature in Celsius.	
		15	Operation time	Operating time after reset.	
		16	Total time	Total operating time.	
		17	Counter value"3	Counter value in Counter mode.	
		18	Received light	Value of the light received level diagnosis.	
		IB	Edge peak ⁻⁴	Displays the edge peak value in Edge peak mode.	
		IC	To main manu		
SB	Analog	N1	Analog outout	4-20 mA, 0-10 V, 1-5 V	4-20 mA
		N2	Average count	1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048	64
		N3	Out of range	Clamp, Hold	Clamp
		N4	Output hold	Off, Peak, Bottom	Off
		N5	Invert span	Not inverted, inverted	Not inverted
		N6	To main menu		
SC	Reset	SB	No		
		SB	Setting reset		
		SB	Factory reset		
CD	To run modo				

- *1: "N.O./N.C." is displayed when "Edge" is selected in "D2 Threshold mode" or when "1-point Zone" or "2-point Zone" is selected during teaching.
- *2: Displayed when "Channel 1" is selected for channel switching by holding down the OK/MENU key.
- *3: Displayed when "On" is selected in "D6 Counter".
- *4: Displayed when "Edge height" is selected in "D2 Threshold mode".
- *5: Only "Off" or "On" can be selected when "Edge height" is selected in "D2 Threshold mode".
- *6: Displayed when "Standard" or "Not used" is selected in "D2 Threshold mode"

7. Specifications

	Type		Stand-alone unit
	Analog output		D4RF-TA
Model Analog output, short-range/high accuracy		t-range/high accuracy	D4BE-TA-Y
Light source	1		4-element Red LED (Wavelength: 660nm)
Response time			16 µs, 70 µs, 250 µs, 500 µs, 1 ms, 2 ms, 8 ms
Teach Mode	Channel A (Analog	a output) setting	Analog 2 points teach. Analog auto teach, Manual
	Channel 1 (Contro		1 point, 2 points, Auto, Through, 1-point Zone, 2-point Zone, Manual
Display	Digital display		OLED display 128 x 22 pixel Menu languages : English, Japanese, Korean, Simplified Chinese, Spanish
	Indicators		Control output indicator (orange), Analog output indicator (orange) Power indicator (green): Lights up when power is on
Interface	Control output		NPN/PNP, open collector or Push-pull selecable by setting Max. 50 mA /30 VDC residual voltage 1.8 V or less
	Analog output		Current output: 4-20 mA, load impedance: 300 ohm or less Voltage output: 0-10 V, 1-5 V, output impedance: 100 ohm or less
	External input		Teach, Counter-reset, Emitter off, Hold out reset or Preset loading 2
Timer function			On delay, Off delay, On/off delay, Pulse output, On delay pulse Adjustable 1 to 30,000 ms
Output mode			Light ON/Dark ON, selectable by setting
Connection type			Cable type: 2m, 5 wires Minimum bending radius: 4 x Cable diameter
Insulation resistanc	e		20 Megohm or more (with 500 VDC)
	Supply voltage		12 to 24 VDC ± 10 % including 10 % ripple (p-p)
Rating	Current	Eco mode: Off	840 mW max. (35 mA or less at 24 VDC, 52 mA or less at 12 VDC)
	consumption	Eco mode: On	744 mW max. (31 mA or less at 24 VDC, 43 mA or less at 12 VDC)
Warm-up time			300 ms
Applicable regulation	ons	EMC	EU EMC directive (2014/30/EU) UK directive EMC (The Electromagnetic Compatibility Regulations 2016)
		Environment	EU RoHS directive (2011/65/EU) UK RoHS (The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012) China RoHS (MIIT Order No. 32)
Applicable standard	is		EN 60947-5-2
NRTL certification			UL Recognized Component Proximity Switch Certified for US and Canada
Company standards			Noise resistance Feilen Level 4 cleared
Protection circuit			Reverse connection protection, Overcurrent protection
	Ambient temperat	ure/humidity	-25 to 55 °C/35 to 85 % RH (no freezing or condensation)
	Ambient illuminan	ce	Sunlight: 10000 lx or less, Incandecent light: 3000 lx or less
Environmental resistance	Vibration resistance	ce	10 to 55 Hz, Double amplitude 1.5 mm; 2 hours in each of the X,Y and Z directions
100101AITUB	Shock resistance		Approx. 50 G (500 m/s ²) 3 times in each of the X,Y and Z directions
	Degree of protecti	ion	IP54
Material			Housing, cover: PC
Weight			Cable model: approx. 71 g (including cable)
Included items			Mounting bracket, Instruction manual

. Support for the China RoHS directive

For details on the support for the China RoHS (the Administrative Measure on the Control of Pollution Caused by Electronic Information Products), see the following website.

https://www.optex-fa.com/rohs_cn/

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and in not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

OPTEX FA CO., LTD.

91 Chudoji-Awata-cho, Shimogyo-ku, Kyoto 600-8815 JAPAN