

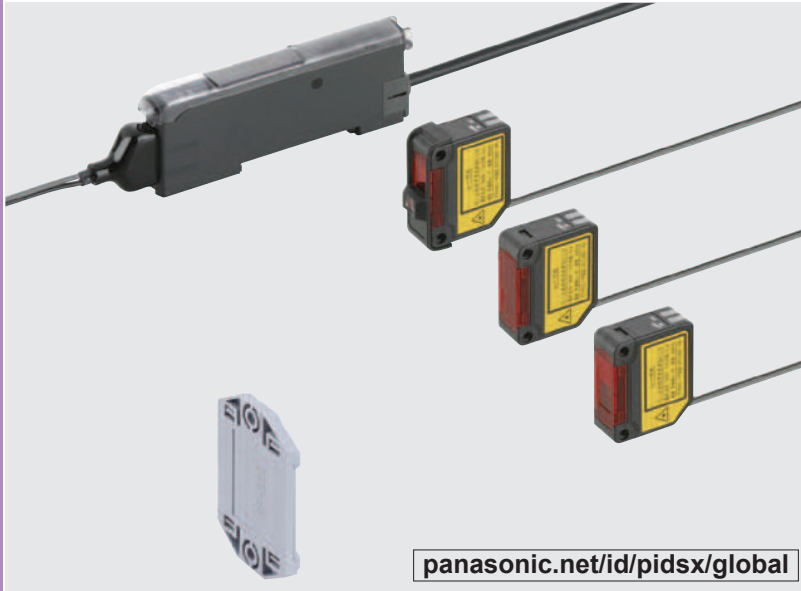
Digital Laser Sensor **Amplifier-separated**

LS-400 SERIES

Need Technical Support?
Got a Tough Application?
Ready to Place an Order?
Contact Ramco Innovations today!

Related Information

- General terms and conditions..... F-7
- SC-GU3 / SC-GU2-C..... P.985~ / P.999
- About laser beam..... P.1499~
- Sensor selection guide P.211~
- Glossary of terms / General precautions..... P.1455~ / P.1458~
- Korea's S-mark..... P.1506



panasonic.net/id/pidsx/global



These products are Class 2 (LS-Ho-A: Class 1) laser in compliance with IEC / JIS / GB standards and FDA* regulations. Do not look at the laser beam directly or through optical system such as a lens.

*This product complies with 21 CFR 1040.10 Laser Notice No. 50, dated July 26, 2001, issued by CDRH (Center for Devices and Radiological Health) under the FDA (Food and Drug Administration).



Test input



PNP output type available



Timer



Light intensity monitor



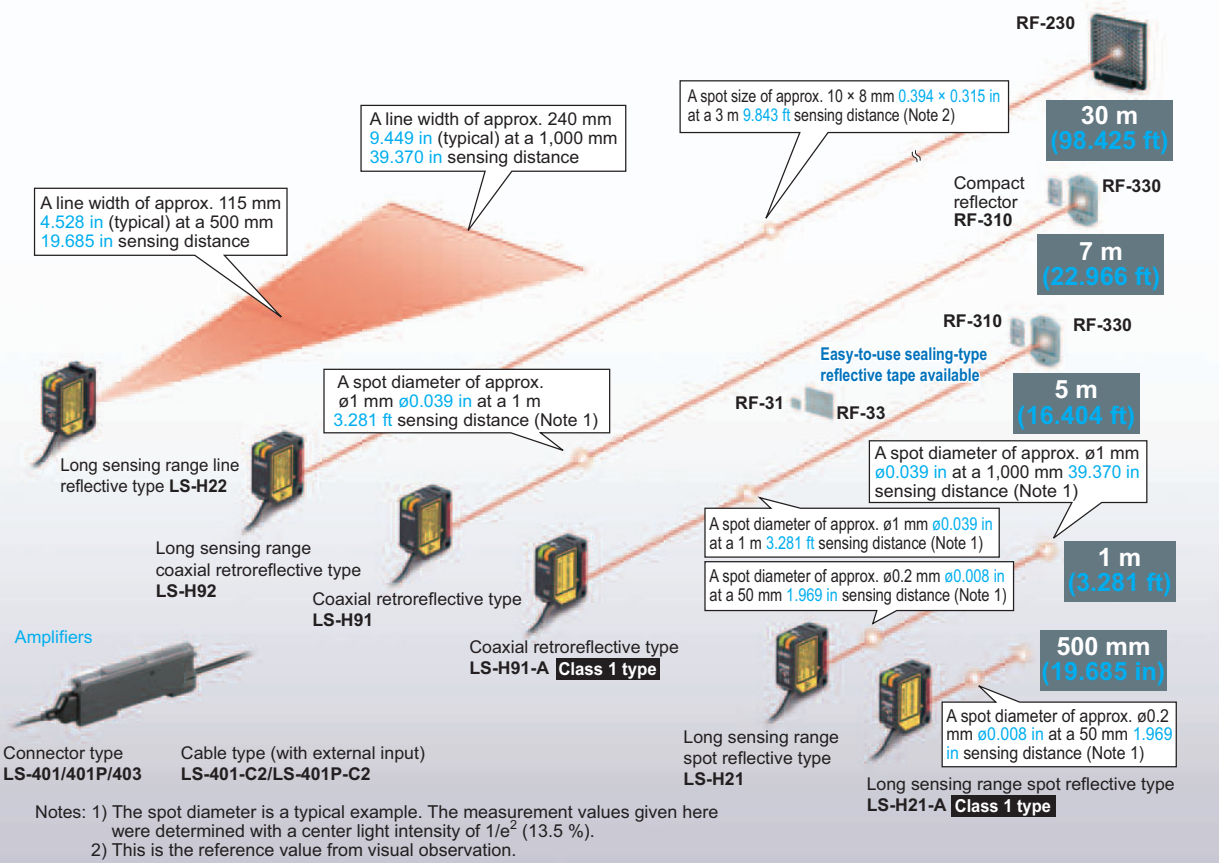
Interference prevention



Automatic sensitivity setting

User-friendly, high precision laser sensing!

We offer 6 types of laser sensor heads for various applications



Selection Guide
Amplifier Built-in
Amplifier-separated

LS-500

LS-400

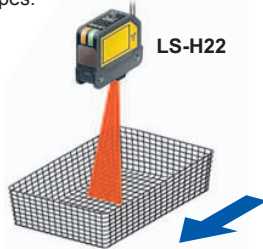
Amplifiers

Connector type
LS-401/401P/403

Cable type (with external input)
LS-401-C2/LS-401P-C2

APPLICATIONS**Detecting objects with a complex shape**

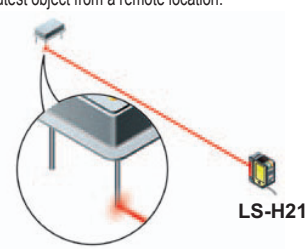
Its linear sensing area enables more stable detection of objects with complex shapes.

**Detecting the remaining amount of sheet rolls**

The coaxial retroreflective sensor with a spot diameter of approx. $\phi 1 \text{ mm } \phi 0.039 \text{ in}$ (at a 1 m 3.281 ft sensing distance), can measure amounts remaining on sheet rolls with high precision.

**Detecting electronic component pins**

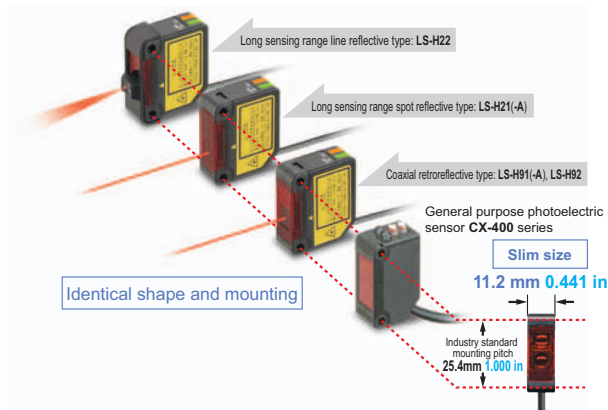
Because its spot shape can be adjusted in accordance with the object, it can be easily set to detect even the minutest object from a remote location.



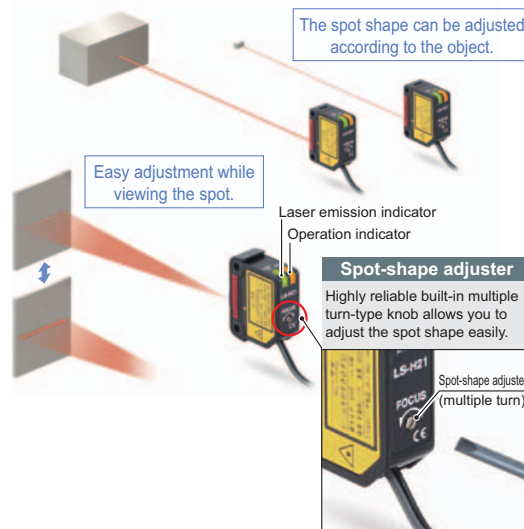
NOTE: The applications given in this catalog are examples for reference only. Stable sensing may not be possible under certain setup conditions and environmental conditions, so be sure to check the actual sensor before use.

Industry standard mounting pitch

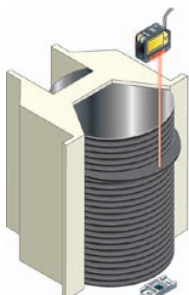
The mounting pitch for sensor heads is 25.4 mm 1.000 in, the same industry standard as the **CX-400** series general purpose photoelectric sensors. Hence, existing mounting brackets can be used even when replacing general purpose sensors with laser sensors.

**Easy and accurate adjustments**

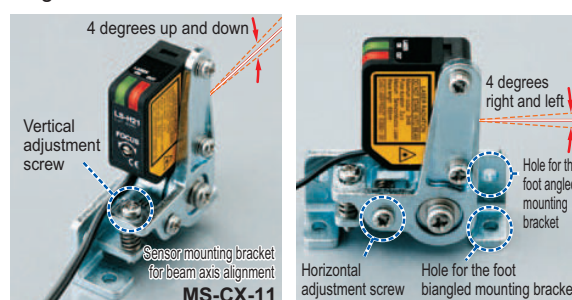
A spot-size adjuster is built into the back of the sensor head allowing the user to adjust the sensor easily while viewing the spot. The adjuster is adjustable with a screwdriver to avoid accidents during maintenance or any other time the sensors are handled.

**Line-up of FDA / IEC / JIS Class 1 type****LS-H91(F)-A, LS-H21(F)-A**

Visible light spot using the Class 1 type. This makes beam axis alignment much easier.

**Sensor mounting bracket for beam axis alignment is available****MS-CX-11**

It is possible to make a minor adjustment for the bracket by 4 degrees up, down, right or left, even after setting up the sensor. The bracket can be mounted in both longitudinal and lateral directions.



FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Amplifier Built-in

Amplifier-separated

LS-500**LS-400**

FIBER
SENSORSLASER
SENSORSPHOTOELECTRIC
SENSORSMICRO
PHOTOELECTRIC
SENSORSAREA
SENSORSLIGHT CURTAINS /
SAFETY
COMPONENTSPRESSURE /
FLOW
SENSORSINDUCTIVE
PROXIMITY
SENSORSPARTICULAR
USE SENSORSSENSOR
OPTIONSSIMPLE
WIRE-SAVING
UNITSWIRE-SAVING
SYSTEMSMEASUREMENT
SENSORSSTATIC ELECTRICITY
PREVENTION
DEVICESLASER
MARKERS

PLC

HUMAN MACHINE
INTERFACESENERGY CONSUMPTION
VISUALIZATION
COMPONENTS

FA COMPONENTS

MACHINE VISION
SYSTEMSUV CURING
SYSTEMS

Easy setting, dual display

Equipped with 2 large 4-digit digital displays. While checking the current incident light intensity (red display), the optimal threshold value (green display) can be set easily.

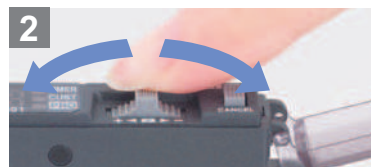


2 switches enable simple operation

Only two switches, the large MODE key and the large jog switch, are required for operation.



MODE Pressing the switch selects or cancels the operating mode



Moving the switch from side to side allows items to be selected



PUSH Pressing the switch then confirms the selected setting

Wiring and space saving

The quick-connection cables enable reductions in wiring. (connector type)

The connections and man-hours for the relay terminal setup can be reduced and valuable space is saved. Also, **LS-400** series sensors can be connected side-by-side, up to 16 units, with a connector type of **FX-500/300** series digital fiber sensors and **DPS-400** series digital pressure sensors.

Note: Because the transmission method varies depending on the amplifiers, check the instruction manual for the amplifiers when connecting them.

Digital fiber sensor
FX-500/300 series
Digital pressure sensor
DPS-400 series

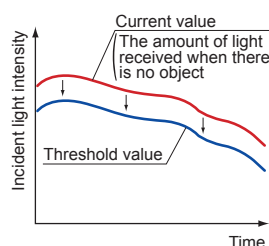


Up to 16 units can be connected together

Threshold tracking function saves maintenance time

LS-403

This function seeks changes in the light emitting amount resulting from changes in the environment over long periods (such as dust levels), so that the incident light intensity can be checked at desired intervals and the threshold values can be reset automatically. This helps to reduce the man-hours for maintenance.



Amplifier with upper communication function is available.

LS-403

The amplifier with upper communication function **LS-403** enables data communication through CC-Link / DeviceNet / EtherCAT by using with a communication unit for open network (**SC-GU2-C** / **SC-GU3** series) together. As for communication unit for open network, other than **LS-403**, laser sensor **LS-501**, digital fiber sensors **FX-501/502/301/305** and digital pressure sensors **DPS-401/402** are also connectable. It is possible to carry out batch data communication.

* Please refer to communication unit for open network for details.

Selection

Guide

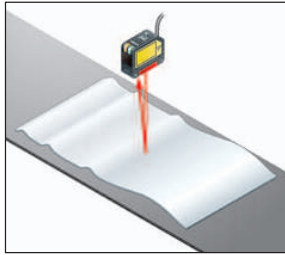
Amplifier

Built-in

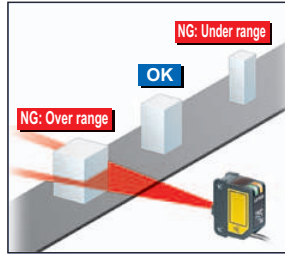
Amplifier-

separated

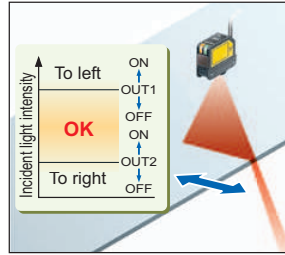
LS-500**LS-400**

4 new modes enabling wide array of sensing**Hysteresis mode**

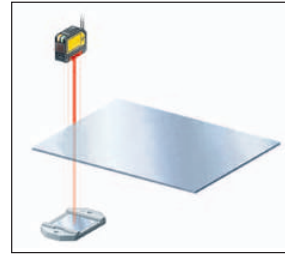
By adjusting the hysteresis, convexo-concave parts of uneven objects can be cancelled enabling more stable sensing.

Window comparator mode

The sensor judges any object outside the range of incident light intensity established by two set threshold values.

2 independent output modes

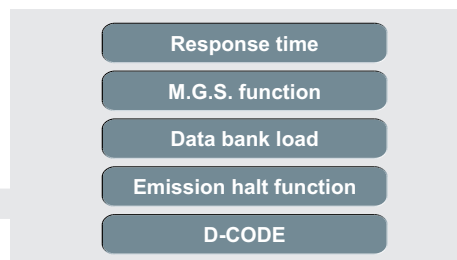
By combining two outputs, wide array of control is possible, allowing you to detect meandering objects, for example.

Differential sensing mode

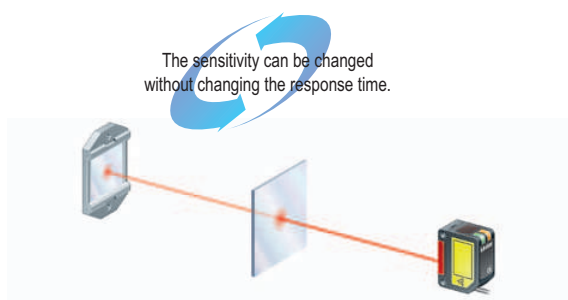
Only rapid changes in light received are detected, which enable the edge of glass, etc. to be detected accurately. Optimal for positioning.

MODE NAVI customized function

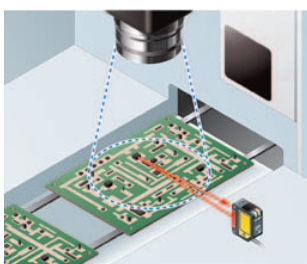
Frequently used functions such as response time, M.G.S. function, data bank load, emission halt function and D-CODE values can be stored in CUSTOM mode. The settings are changed easily.

**Accurately sense the minutest variations (M.G.S. function)**

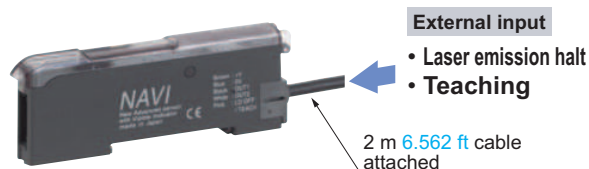
When sensing at close range or when the target objects are transparent or minute, adjust the sensor receiving sensitivity to one of 3 levels (U-LG mode: 4 levels) for the optimal setting. In addition, changing the receiving sensitivity will not effect the response time.

**Emission halt function**

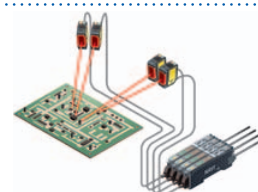
Using the emission halt function, the laser beam can be stopped via external input, e.g. when a spot appears within the visual range of an image processor.

**Cable type allows external input**

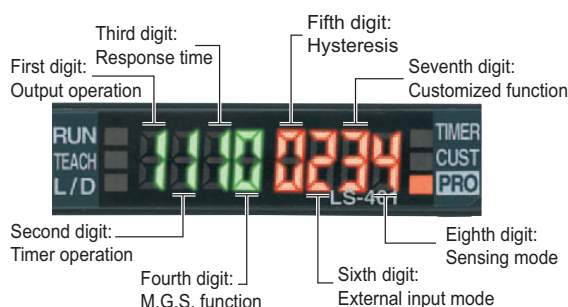
The **LS-401-C2** cable-type amplifier is equipped with an external input wire (5-core). It is ideal to use the laser sensor at places where external teaching or laser light emission halting is to be carried out, or at the places where the laser sensor is to be used separately.

**Interference prevention function**

The automatic interference prevention function prevents against interference among up to 4 sensors.

**Setting conditions viewed at a glance (D-CODE)**

The amplifier setting is shown as an 8-digit code. Handy for remote indications and follow-ups.



FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS



UV CURING SYSTEMS

Selection Guide
Amplifier Built-in
Amplifier-separated

LS-500

LS-400

ORDER GUIDE**Sensor heads**

Type	Appearance	Model No.	Conforming standards	Sensing range	<div> <div></div> : U-LG <div></div> : STD <div></div> : FAST <div></div> : H-SP </div>
Coaxial retroreflective		LS-H92	IEC / JIS / GB	<div> <div></div> 0.2 to 30 m 0.656 to 98.425 ft (Note 2) <div></div> 0.2 to 20 m 0.656 to 65.617 ft (Note 2) <div></div> 0.2 to 10 m 0.656 to 32.808 ft (Note 2) <div></div> 0.2 to 10 m 0.656 to 32.808 ft (Note 2) </div>	
		LS-H92F (Note 1)	FDA / IEC / JIS		
		LS-H91	IEC / JIS / GB	<div> <div></div> 0.1 to 7 m 0.328 to 22.966 ft (Note 2) <div></div> 0.1 to 5 m 0.328 to 16.404 ft (Note 2) <div></div> 0.1 to 3 m 0.328 to 9.843 ft (Note 2) <div></div> 0.1 to 3 m 0.328 to 9.843 ft (Note 2) </div>	
		LS-H91F (Note 1)	FDA / IEC / JIS		
		LS-H91-A	IEC / JIS / GB	<div> <div></div> 0.1 to 5 m 0.328 to 16.404 ft (Note 2) <div></div> 0.1 to 3 m 0.328 to 9.843 ft (Note 2) <div></div> 0.1 to 1 m 0.328 to 3.281 ft (Note 2) <div></div> 0.1 to 1 m 0.328 to 3.281 ft (Note 2) </div>	
		LS-H91F-A (Note 1)	FDA / IEC / JIS		
Diffuse reflective	Long sensing range spot reflective	LS-H21	IEC / JIS / GB	<div> <div></div> 30 to 1,000 mm 1.181 to 39.370 in <div></div> 30 to 500 mm 1.181 to 19.685 in <div></div> 30 to 300 mm 1.181 to 11.811 in <div></div> 30 to 300 mm 1.181 to 11.811 in </div>	
		LS-H21F (Note 1)	FDA / IEC / JIS		
		LS-H21-A	IEC / JIS / GB	<div> <div></div> 30 to 500 mm 1.181 to 19.685 in <div></div> 30 to 250 mm 1.181 to 9.843 in <div></div> 30 to 150 mm 1.181 to 5.906 in <div></div> 30 to 150 mm 1.181 to 5.906 in </div>	
		LS-H21F-A (Note 1)	FDA / IEC / JIS		
	Long sensing range line reflective	LS-H22 (Note 3)	IEC / JIS / GB	<div> <div></div> 30 to 1,000 mm 1.181 to 39.370 in <div></div> 30 to 500 mm 1.181 to 19.685 in <div></div> 30 to 300 mm 1.181 to 11.811 in <div></div> 30 to 300 mm 1.181 to 11.811 in </div>	
		LS-H22F (Note 1, 3)	FDA / IEC / JIS		

NOTE: Mounting bracket is not supplied with the sensor head. Please select from the range of optional sensor head mounting brackets.

- Notes: 1) This product complies with 21 CFR 1040.10 Laser Notice No. 50, dated July 26, 2001, issued by CDRH (Center for Devices and Radiological Health) under the FDA (Food and Drug Administration). For details, refer to the Laser Notice No. 50.
- 2) The sensing range is the value for the **RF-330** [**RF-230** for the **LS-H92(F)**] reflector. In addition, the sensing range is the possible setting range for the reflector. The sensor can detect an object less than 0.1 m **0.328 ft** [**LS-H92(F)**: 0.2 m **0.656 ft**] away. Note that if there are white papers or specular objects near the sensor head, reflected light from these objects may be received. In such cases, use the M.G.S. function of the amplifier unit to change the response time or incident light sensitivity.
- 3) **LS-H22(F)** is the model No. for **LS-H21(F)** long sensing range spot reflective type sensor head combined with the **LS-MR1** lens attachment for line reflective type sensor head. Hence, **LS-H21(F)** appears on the sensor head itself.

5 m 16.404 ft cable length type

5 m **16.404 ft** cable length type (standard: 2 m **6.562 ft**) is also available.
When ordering this type, suffix "-C5" to the model No.



• **LS-H91-C5** • **LS-H91-A-C5** • **LS-H21-C5** • **LS-H22-C5**

Package without reflector

The **LS-H91(F)**, **LS-H91F-A** and **LS-H92(F)** are also available without the reflector (**RF-330** or **RF-230**).
When ordering this type, suffix "-Y" to the model No.

• **LS-H92-Y** • **LS-H92F-Y** • **LS-H91-Y** • **LS-H91F-Y**
• **LS-H91-A-Y** • **LS-H91F-A-Y**



ORDER GUIDE**Amplifiers**

Type	Appearance	Model No.	Output	Connection method
Connector type With upper communication function (Note 2)		LS-401 (Note 1)	NPN open-collector transistor two outputs	Use quick-connection cable (4-core) (optional)
		LS-401P	PNP open-collector transistor two outputs	
		LS-403	NPN open-collector transistor two outputs	
Cable type (With external input)		LS-401-C2 (Note 1)	NPN open-collector transistor two outputs	2 m 6.562 ft cabtyre cable (5-core) included Cable outer diameter: $\phi 3.7$ mm $\phi 0.146$ in
		LS-401P-C2	PNP open-collector transistor two outputs	

Notes: 1) Obtained Korea's S-mark certification.

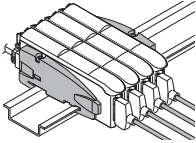
2) For upper communication, a communication unit for open network (**SC-GU2-C** / **SC-GU3** series) is needed separately.**Quick-connection cables**



Quick-connection cable is not supplied with the connector type amplifier. Please order it separately.

Type	Appearance	Model No.	Description
Main cable (4-core)		CN-74-C1	Length: 1 m 3.281 ft
		CN-74-C2	Length: 2 m 6.562 ft
		CN-74-C5	Length: 5 m 16.404 ft
Sub cable (2-core)		CN-72-C1	Length: 1 m 3.281 ft
		CN-72-C2	Length: 2 m 6.562 ft
		CN-72-C5	Length: 5 m 16.404 ft

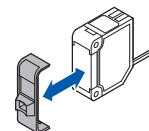
End plates

End plates are not supplied with the amplifier. Please order them separately when the amplifiers are mounted in cascade.

Type	Model No.	Description
	MS-DIN-E	When cascading multiple amplifiers, or when it moves depending on the way it is installed on a DIN rail, these end plates clamp amplifiers into place on both sides. Make sure to use end plates when cascading multiple amplifiers together. Two pcs. per set

Accessories• **RF-330** (Reflector)• **RF-230** (Reflector)Note: **LS-H92(F)** only• **CN-EP1** (Connector for amplifier)**5 pcs. per set** (Note)

Note: One is attached to each sensor head according to standard.

• **LS-MR1** (Lens attachment for line reflective type)**LS-500****LS-400**

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Amplifier Built-in

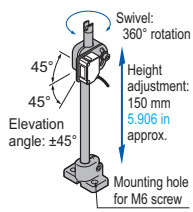
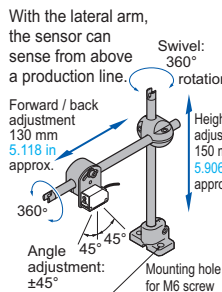
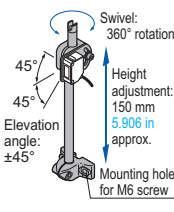
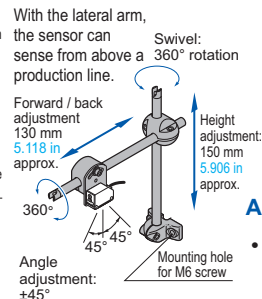
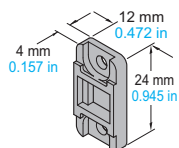



Amplifier-separated

OPTIONS

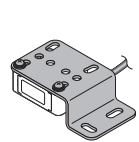
FIBER SENSORS
LASER SENSORS
PHOTO-ELECTRIC SENSORS
MICRO PHOTO-ELECTRIC SENSORS
AREA SENSORS
LIGHT CURTAINS / SAFETY COMPONENTS
PRESSURE / FLOW SENSORS
INDUCTIVE PROXIMITY SENSORS
PARTICULAR USE SENSORS
SENSOR OPTIONS
SIMPLE WIRE-SAVING UNITS
WIRE-SAVING SYSTEMS
MEASUREMENT SENSORS
STATIC ELECTRICITY PREVENTION DEVICES
LASER MARKERS
PLC
HUMAN MACHINE INTERFACES
ENERGY CONSUMPTION VISUALIZATION COMPONENTS
FA COMPONENTS
MACHINE VISION SYSTEMS
UV CURING SYSTEMS

Designation	Model No.	Description	
Sensor head mounting bracket	MS-CX-1	Foot angled mounting bracket	
	MS-CX-2	Foot biangled mounting bracket Flat mounting possible to avoid obstructions caused by the height of the sensor.	
	MS-CX-3	Back angled mounting bracket	
	MS-CX-4	Protective mounting bracket Protects sensors preventing beam axis displacement due to shocks.	
Sensor mounting bracket for beam axis alignment	MS-CX-11	Mounting bracket that makes fine beam axis alignment possible after setting the sensor head. Adjustment angle: up and down, right and left: 4 degrees Mounting directions: two directions, vertical and horizontal	
Universal sensor mounting stand (Note 1)	MS-AJ1	Horizontal mounting type	Basic assembly
	MS-AJ2	Vertical mounting type	
	MS-AJ1-A	Horizontal mounting type	Lateral arm assembly
	MS-AJ2-A	Vertical mounting type	
Amplifier mounting bracket	MS-DIN-2	Mounting bracket for amplifier	
Reflector mounting bracket	MS-RF23	Mounting bracket for RF-230	
Amplifier protection seal	FX-MB1	10 sets of 2 communication window seals and 1 connector seal Communication window seal: It prevents malfunction due to transmission signal from another amplifier, as well as, prevents effect on another amplifier. Connector seal: It prevents contact of any metal, etc., with the pins of the quick-connection cable.	
Reflector	RF-310	For coaxial retroreflective type Compact reflector	Sensing range (U-LG mode) • LS-H91(F) : 0.1 to 7 m 0.328 to 22.966 ft • LS-H91(F)-A : 0.1 to 5 m 0.328 to 16.404 ft
Reflective tape	RF-33	For coaxial retroreflective type Size: 25.2 × 27.8 × t 0.4 mm 0.992 × 1.094 × t 0.016 in	
	RF-31	For coaxial retroreflective type Size: 9.2 × 9.2 × t 0.4 mm 0.362 × 0.362 × t 0.016 in	
Bank selection unit (Note 2)	FX-CH	NPN input type	Setting for up to 16 laser sensors can be changed at once by means of external signals.
	FX-CH-P	PNP input type	


Notes: 1) Refer to p.979 the universal sensor mounting stand **MS-AJ** series.
2) Please see the website for details of the bank selection unit **FX-CH**.

Universal sensor mounting stand• **MS-AJ1**• **MS-AJ1-A**• **MS-AJ2**• **MS-AJ2-A****Reflector**• **RF-310****Reflective tape**• **RF-33**• **RF-31****Sensor head mounting bracket**• **MS-CX-1**

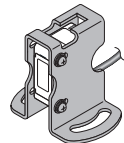
Two M3 (length 12 mm 0.472 in) screws with washers are attached.

• **MS-CX-2**

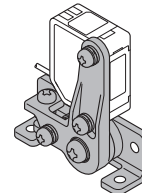
Two M3 (length 12 mm 0.472 in) screws with washers are attached.

• **MS-CX-3**

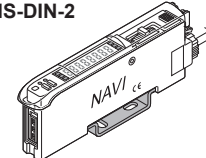
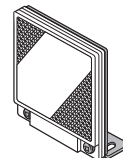
Two M3 (length 12 mm 0.472 in) screws with washers are attached.

• **MS-CX-4**

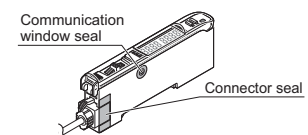
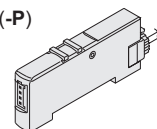
Two M3 (length 12 mm 0.472 in) screws with washers are attached.

Sensor mounting bracket for beam axis alignment• **MS-CX-11**

Two M3 (length 14 mm 0.551 in) screws with washers are attached.

Amplifier mounting bracket• **MS-DIN-2****Reflector mounting bracket**• **MS-RF23**

Two M4 (length 10 mm 0.394 in) screws with washers are attached.

Amplifier protection seal• **FX-MB1****Bank selection unit**• **FX-CH(-P)**

SPECIFICATIONS**Sensor heads**

Item	Type		Coaxial retroreflective			Diffuse reflective		
			Class 2		Class 1	Long sensing range spot reflective		Long sensing range line reflective
						Class 2	Class 1	
	Model No.	IEC / JIS / GB standards conforming type	LS-H92	LS-H91	LS-H91-A	LS-H21	LS-H21-A	LS-H22(Note 3)
	FDA / IEC / JIS standards conforming type (Note 2)	LS-H92F	LS-H91F	LS-H91F-A	LS-H21F	LS-H21F-A	LS-H22F(Note 3)	
Applicable amplifiers			LS-401(P), LS-401(P)-C2, LS-403					
Sensing range	U-LG mode	0.2 to 30 m 0.656 to 98.425 ft (Note 4)	0.1 to 7 m 0.328 to 22.966 ft (Note 4)	0.1 to 5 m 0.328 to 16.404 ft (Note 4)	30 to 1,000 mm 1.181 to 39.370 in	30 to 500 mm 1.181 to 19.685 in	30 to 1,000 mm 1.181 to 39.370 in	
	STD mode	0.2 to 20 m 0.656 to 65.617 ft (Note 4)	0.1 to 5 m 0.328 to 16.404 ft (Note 4)	0.1 to 3 m 0.328 to 9.843 ft (Note 4)	30 to 500 mm 1.181 to 19.685 in	30 to 250 mm 1.181 to 9.843 in	30 to 500 mm 1.181 to 19.685 in	
	FAST mode	0.2 to 10 m 0.656 to 32.808 ft (Note 4)	0.1 to 3 m 0.328 to 9.843 ft (Note 4)	0.1 to 1 m 0.328 to 3.281 ft (Note 4)	30 to 300 mm 1.181 to 11.811 in	30 to 150 mm 1.181 to 5.906 in	30 to 300 mm 1.181 to 11.811 in	
	H-SP mode							
Operation indicator			Orange LED (lights up when the amplifier output is ON)					
Laser emission indicator			Green LED (lights up during laser emission)					
Spot-shape adjuster			—		Multi-turn adjuster			
Environmental resistance	Protection	IP40 (IEC)						
	Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F						
	Ambient humidity	35 to 85 % RH, Storage: 35 to 85 % RH						
	Ambient illuminance	Incandescent light: 3,000 lx at the light-receiving face						
	Voltage withstandability	1,000 V AC for one min. between all supply terminals connected together and enclosure						
	Insulation resistance	20 MΩ, or more, with 250 V DC megger between all supply terminals connected together and enclosure						
	Vibration resistance	10 to 500 Hz frequency, 1.5 mm 0.059 in (10 G max.) amplitude in X, Y and Z directions for two hours each						
	Shock resistance	100 m/s ² acceleration (10 G approx.) in X, Y and Z directions for three times each						
Emitting element	IEC / JIS / GB standards conforming type	Red semiconductor laser, Class 2 (IEC / JIS / GB) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 1 (IEC / JIS / GB) (Max. output: 1 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 2 (IEC / JIS / GB) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 1 (IEC / JIS / GB) (Max. output: 1 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 2 (IEC / JIS / GB) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)		
	FDA / IEC / JIS standards conforming type (Note 2)	Red semiconductor laser, Class 2 (FDA / IEC / JIS) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 1 (FDA / IEC / JIS) (Max. output: 1 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 2 (FDA / IEC / JIS) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 1 (FDA / IEC / JIS) (Max. output: 1 mW Peak emission wavelength: 655 nm 0.026 mil)	Red semiconductor laser, Class 2 (FDA / IEC / JIS) (Max. output: 3 mW Peak emission wavelength: 655 nm 0.026 mil)		
Material			Enclosure: PBT (Mounting part: PEI), Lens cover: Acrylic					
Cable			0.1 mm ² , single core two parallel shielded cables, 2 m 6.562 ft long (Connector for amplifier attached) (Note 5)					
Weight			Net weight: 30 g approx. Gross weight: 40 g approx.	Net weight: 30 g approx. Gross weight: 45 g approx.	Net weight: 30 g approx. Gross weight: 40 g approx.	Net weight: 35 g approx. Gross weight: 45 g approx.		
Accessories			RF-230(Reflector): 1 pc. Warning label: 1 set (Labels are written in Japanese, English and Chinese for compliance with various standards.)	RF-330(Reflector): 1 pc. Warning label: 1 set (Labels are written in Japanese, English and Chinese for compliance with various standards.)	RF-330(Reflector): 1 pc. Explanation label: 1 set (Labels are written in Japanese and Chinese for compliance with various standards.)	Warning label: 1 set (Labels are written in Japanese, English and Chinese for compliance with various standards.) Explanation label: 1 set (Labels are written in Japanese and Chinese for compliance with various standards.)	LS-MR1 (Lens attachment for line reflective): 1 pc. Warning label: 1 set (Labels are written in Japanese, English and Chinese for compliance with various standards.)	

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

2) This product complies with 21 CFR 1040.10 Laser Notice No. 50, dated July 26, 2001, issued by CDRH (Center for Devices and Radiological Health) under the FDA (Food and Drug Administration). For details, refer to the Laser Notice No. 50.

3) **LS-H22(F)** is the set model No. for **LS-H21(F)** long sensing range spot reflective type sensor head combined with the **LS-MR1** lens attachment for line reflective type. Hence, **LS-H21(F)** appears on the sensor head itself.

4) The sensing range is the value for the **RF-330** [**RF-230** for the **LS-H92(F)**] reflector. In addition, the sensing range is the possible setting range for the reflector. The sensor can detect an object less than 0.1 m 0.328 ft [**LS-H92(F)**: 0.2 m 0.656 ft] away. Note that if there are white papers or specular objects near the sensor head, reflected light from these objects may be received. In such cases, use the M.G.S. function of the amplifier unit to change the response time or incident light sensitivity.

5) Cable cannot be extended.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Amplifier Built-in

Amplifier-separated

LS-500**LS-400**

SPECIFICATIONS

Amplifiers

Item	Model No.	Type	Connector type		Cable type
				With upper communication function	
		NPN output	LS-401	LS-403	LS-401-C2
		PNP output	LS-401P	—	LS-401P-C2
Supply voltage		12 to 24 V DC ±10 % Ripple P-P 10 % or less			
Power consumption		Normal operation: 950 mW or less (Current consumption 40 mA or less at 24 V supply voltage) ECO mode: 780 mW or less (Current consumption 33 mA or less at 24 V supply voltage)			
Outputs (Output 1, Output 2)		<div><NPN output type> NPN open-collector transistor<ul style="list-style-type: none">Maximum sink current: 100 mA (LS-401) (Note 2), 50 mA (LS-403) (Note 3)Applied voltage: 30 V DC or less (between output and 0 V)Residual voltage: 1.5 V or less at 100 mA (Note 2) sink current </div>			

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C +73.4 °F.

2) In case of **LS-401(P)**, 50 mA if 5 to 8 amplifiers are connected in cascade, and 25 mA if 9 to 16 amplifiers are connected in cascade.

3) In case of **LS-403**, 25 mA if 5 to 16 amplifiers are connected in cascade.

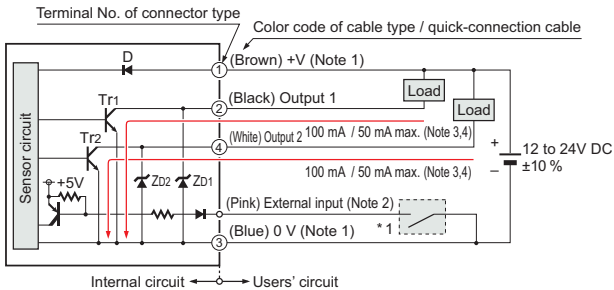
4) The cable is not supplied as an accessory for connector type. Be sure to purchase the optional quick-connection cables given below.

When connecting to **SC-GU2-C**, be sure to purchase the optional non-line connector.

Main cable (4-core): **CN-74-C1** (cable length 1 m 3.281 ft), **CN-74-C2** (cable length 2 m 6.562 ft), **CN-74-C5** (cable length 5 m 16.404 ft)

Sub cable (2-core): **CN-72-C1** (cable length 1 m 3.281 ft), **CN-72-C2** (cable length 2 m 6.562 ft), **CN-72-C5** (cable length 5 m 16.404 ft)


Non-line connector: **CN-70**

I/O CIRCUIT AND WIRING DIAGRAMS**LS-401(-C2) LS-403****NPN output type****I/O circuit diagram**

- Notes: 1) The quick-connection sub cable does not have +V (brown) and 0 V (blue). The power is supplied from the connector of the main cable.
 2) Connector type **LS-401/403** does not incorporate the external input.
 3) **LS-401(-C2)** is 100 mA max, however, **LS-401(-C2)** is 50 mA max. if 5 to 8 amplifiers are connected in cascade, and 25 mA max. if 9 to 16 amplifiers are connected in cascade.
 4) **LS-403** is 50 mA max, however, it is 25 mA max. if 5 to 16 amplifiers are connected in cascade.

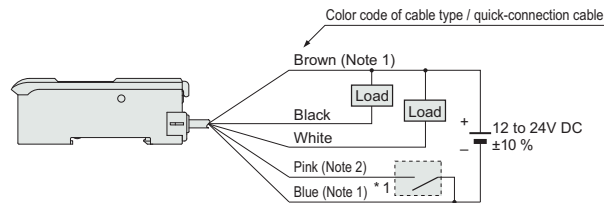
* 1

Non-voltage contact or NPN open-collector transistor

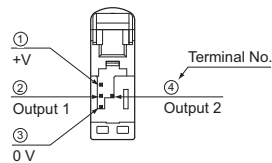



- External input
High: +5 V to +V, or open
Low: 0 to +2 V (source current: 0.5 mA or less)
Beam emission halts and teaching occurs when at Low.

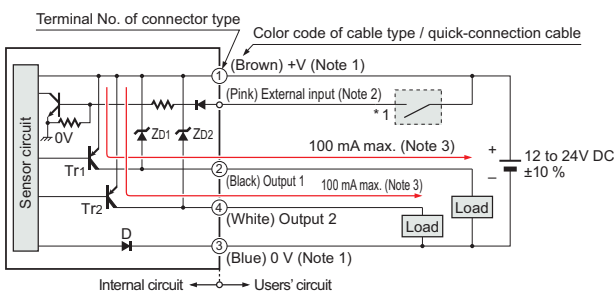
Symbols ... D: Reverse supply polarity protection diode
 ZD1, ZD2: Surge absorption zener diode
 Tr1, Tr2: NPN output transistor

Wiring diagram

- Notes: 1) The quick-connection sub cable does not have brown lead wire and blue lead wire.
 The power is supplied from the connector of the main cable.
 2) The quick-connection cable does not have a pink lead wire.

Terminal layout of connector type*** Connector for amplifier (CN-EP1) pin position**


Terminal No.	Connection cable	
①	Conductor core wire: Brown	Cable color: Gray
②	Shield wire	
③	Conductor core wire: Yellow	Cable color: Black
④	Shield wire	

LS-401P(-C2)**PNP output type****I/O circuit diagram**

- Notes: 1) The quick-connection sub cable does not have +V (brown) and 0 V (blue). The power is supplied from the connector of the main cable.
 2) Connector type **LS-401P** does not incorporate the external input.
 3) **LS-401P** is 50 mA max. if 5 to 8 amplifiers are connected in cascade, and 25 mA max. if 9 to 16 amplifiers are connected in cascade.

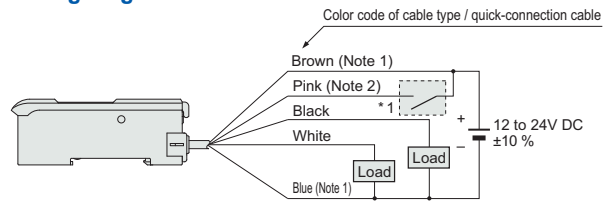
* 1

Non-voltage contact or PNP open-collector transistor

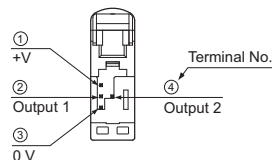



- External input
High: +4 V to +V (sink current: 3 mA or less)
Low: 0 to +0.6 V, or open
Beam emission halts and teaching occurs when at High.

Symbols ... D: Reverse supply polarity protection diode
 ZD1, ZD2: Surge absorption zener diode
 Tr1, Tr2: PNP output transistor

Wiring diagram

- Notes: 1) The quick-connection sub cable does not have brown lead wire and blue lead wire.
 The power is supplied from the connector of the main cable.
 2) The quick-connection cable does not have a pink lead wire.

Terminal layout of connector type*** Connector for amplifier (CN-EP1) pin position**

Terminal No.	Connection cable	
①	Conductor core wire: Brown	Cable color: Gray
②	Shield wire	
③	Conductor core wire: Yellow	Cable color: Black
④	Shield wire	

FIBER
SENSORSLASER
SENSORSPHOTO-
ELECTRIC
SENSORSMICRO
PHOTO-
ELECTRIC
SENSORSAREA
SENSORSLIGHT
CURTAINS /
SAFETY
COMPONENTSPRESSURE /
FLOW
SENSORSINDUCTIVE
PROXIMITY
SENSORSPARTICULAR
USE
SENSORSSENSOR
OPTIONSSIMPLE
WIRE-
SAVING
UNITSWIRE-
SAVING
SYSTEMSMEASURE-
MENT
SENSORSSTATIC
ELECTRICITY
PREVENTION
DEVICESLASER
MARKERS

PLC

HUMAN
MACHINE
INTERFACESENERGY
CONSUMPTION
VISUALIZATION
COMPONENTSFA
COMPONENTSMACHINE
VISION
SYSTEMSUV
CURING
SYSTEMSSelection
GuideAmplifier
Built-inAmplifier-
separated

LS-500

LS-400

FIBER
SENSORSLASER
SENSORSPHOTO-
ELECTRIC
SENSORSMICRO
PHOTO-
ELECTRIC
SENSORSAREA
SENSORSLIGHT
CURTAINS/
SAFETY
COMPONENTSPRESSURE /
FLOW
SENSORSINDUCTIVE
PROXIMITY
SENSORSPARTICULAR
USE
SENSORSSENSOR
OPTIONSSIMPLE
WIRE-SAVING
UNITSWIRE-SAVING
SYSTEMSMEASURE-
MENT
SENSORSSTATIC
ELECTRICITY
PREVENTION
DEVICESLASER
MARKERS

PLC

HUMAN
MACHINE
INTERFACESENERGY
CONSUMPTION
VISUALIZATION
COMPONENTSFA
COMPONENTSMACHINE
VISION
SYSTEMSUV
CURING
SYSTEMS**PRECAUTIONS FOR PROPER USE**

Refer to p.1458~ for general precautions and p.1499~ for information about laser beam.

- This catalog is a guide to select a suitable product. Be sure to read the instruction manual attached to the product prior to its use.



- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

Cautions for laser beams

- These products are class 2 (**LS-H□-A:** Class 1) laser in compliance with IEC / JIS / GB standards and FDA* regulations. Do not look at the laser beam directly or through optical system such as a lens.
- The following label is attached to the product. Handle the product according to the instruction given on the warning label.

IEC / JIS / GB Class 2 type

FDA Class 1 type



(This product has warning labels attached and included in the packaging that are written in Japanese, English and Chinese for compliance with various standards.)

(This product has explanation labels attached and included in the packaging that are written in Japanese, English and Chinese for compliance with various standards.)

* This product complies with 21 CFR 1040.10 Laser Notice No. 50, dated July 26, 2001, issued by CDRH (Center for Devices and Radiological Health) under the FDA (Food and Drug Administration).

Safety standards for laser beam products

- A laser beam can harm human being's eyes, skin, etc., because of its high energy density. IEC has classified laser products according to the degree of hazard and the stipulated safety requirements. **LS-H□(F)** is classified as Class 2 laser. **LS-H□(F)-A** is classified as Class 1 laser.

Classification by IEC 60825-1

Classification	Description
Class 1	Lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.
Class 2	Lasers that emit visible radiation in the wavelength range from 400 nm to 700 nm where eye protection is normally afforded by aversion responses, including the blink reflex. This reaction may be expected to provide adequate protection under reasonably foreseeable conditions of operation including the use of optical instruments for intrabeam viewing.

Safe use of laser products

- For the purpose of preventing users from suffering injuries by laser products, IEC 60825-1 (Safety of laser products). Kindly check the standards before use.

Cautions when connecting amplifiers in cascade

- Refer to connecting conditions written below when connecting amplifiers in cascade.
- When amplifiers are installed, refer to "**Cautions on communication function**" and use communication function.

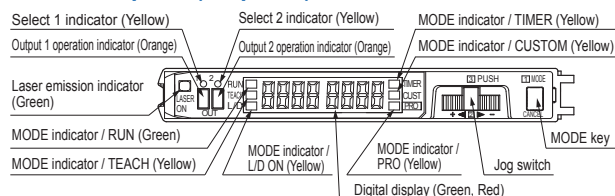
Connecting conditions

	Group A	LS-401(P)(-C2), FX-301(P): Previous version unit (Note 1), FX-301G(P)/B(P)/H(P), FX-41□(P)
	Group B	FX-301(P): Updated version unit (Note 1), FX-301(P)-C1, FX-305(P) (Note 2)
	Group C	LS-403, DPS-400 series, SC-T1JA
	Group D	FX-500 series

Notes: 1) The previous version unit is manufactured before June 2004.
The updated version unit is manufactured after June 2004.
2) Be sure to install **FX-305** behind **FX-301**.

Cautions on communication function

Copy function / channel bank function (when communicating)	Conditions when using SC-GU2-C	Interference prevention function
Each group should be cascaded in a lump. When group A, group B and group C are connected together in cascade, as for the products that are located between different groups, put the amplifier protection seal (FX-MB1 optional) on the amplifier communication window of each corresponding product. Interference prevention function cannot be used if amplifier protection seal is put on the amplifier communication window. Choose one from copy function / channel bank function (communication) or interference prevention function to be used. When not using group A, copy function / channel bank function (communication) and interference prevention function can be used without putting on the amplifier protection seal. (Follow the connecting conditions when connecting.)	[Group A] It cannot communicate with master. [Group B, Group C] They can communicate with master. When group B and group C are connected together in cascade, be sure that group B is located on the left side of group C.	Each group should be cascaded in a lump. When group A, group B and group C are connected together in cascade, refer to the connecting conditions for connecting. (Copy function cannot be used.)

Part description (Amplifier)**Spot-shape adjuster (Only for LS-H21□, LS-H22□)**

- The diffuse reflective type **LS-H21□** and **LS-H22□** incorporate the spot-shape adjuster to adjust the shape of spots.

Spot-shape adjuster	Description
	Turn the spot-shape adjuster clockwise or counter-clockwise to adjust the spot shape at your desired detecting distance. However, if the adjuster is turned too far, it may be damaged.

PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions and p.1499~ for information about laser beam.

Mounting**Amplifier****<How to mount the amplifier>**

- ① Fit the rear part of the mounting section of the amplifier on a 35 mm 1.378 in width DIN rail.
- ② Press down the rear part of the mounting section of the unit on the 35 mm 1.378 in width DIN rail and fit the front part of the mounting section to the DIN rail.

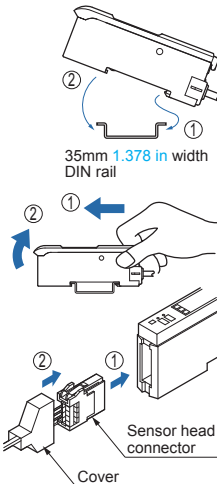
<How to remove the amplifier>

- ① Push the amplifier forward.
- ② Lift up the front part of the amplifier to remove it.

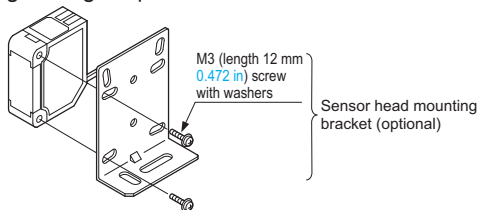
Note: Be careful. If the front part is lifted without pushing the amplifier forward, the hook on the rear portion of the mounting section is likely to break.

<How to mount the sensor head>

- ① Insert the sensor head connector into the inlet until it clicks.
- ② Fit the cover to the connector.

**Sensor head**

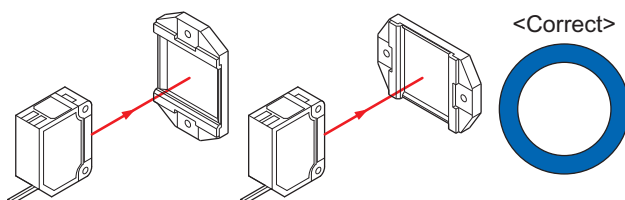
- The tightening torque should be 0.5 N·m or less.



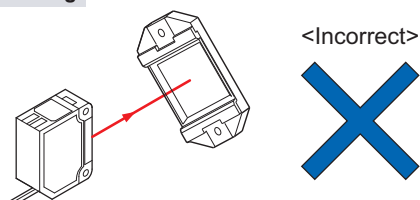
- When placing the sensor head horizontally or vertically, the reflector must also be positioned horizontally or vertically as shown in Fig. 1 below.
If the sensor head is placed horizontally or vertically but the reflector is leaned as shown in Fig. 2 below, the reflection amount will decrease, which may cause unstable detection.

Fig. 1 Proper positioning

When placing the sensor head horizontally or vertically, the reflector shall also be positioned horizontally or vertically.

**Fig. 2 Improper positioning**

When placing the sensor head horizontally or vertically, but the reflector is leaned.

**Lens attachment for line reflective type (LS-MR1)**

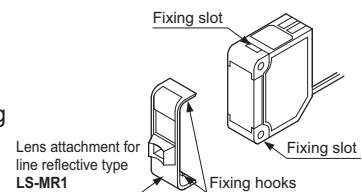
- The lens attachment for line reflective type **LS-MR1** mounted in the long sensing range line reflective type **LS-H22** is removable. When **LS-H22** is used without **LS-MR1**, it will provide the equivalent performance to the long sensing range spot reflective type **LS-H21**. In addition, the optional **LS-MR1** can be attached to **LS-H21** to obtain the performance equivalent to **LS-H22**.
- Keep the lens clean of dust, dirt, water, oil, grease, etc.
- Do not apply any excessive force to **LS-MR1**. Such force may cause damage.

Removing method

- ① Insert a screwdriver into the fixing slot located at the top of sensor head.
- ② Tilt the screwdriver inserted in Step ① to remove **LS-MR1**.

Mounting method

- ① The size of upper fixing hook of **LS-MR1** is not same as the lower fixing hook. After identifying the upper and lower fixing hooks, insert **LS-MR1** upper fixing hook into the fixing slot at the top of sensor head and then insert **LS-MR1** lower fixing hook into the fixing slot at the bottom of sensor head.
- ② After mounting, check that **LS-MR1** is properly fixed to the sensor head.

**Wiring**

- Make sure that the power supply is off while wiring.
- Verify that the supply voltage variation is within the rating.
- Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the sensor may get burnt or damaged.
- Take care that short-circuit or wrong wiring of the load may burn or damage the sensor.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- Ensure that an isolation transformer is utilized for the DC power supply. If an auto transformer is utilized, the main amplifier or power supply may be damaged.
- Make sure to use the optional quick-connection cable for the connection of the amplifier [connector type **LS-401(P)** / **LS-403**]. Extension up to total 100 m 328.084 ft is possible with 0.3 mm², or more, cable. However, in order to reduce noise, make the wiring as short as possible.

Others

- Do not use during the initial transient time (0.5 sec. approx.) after the power supply is switched on.
- Because the sensitivity is higher in U-LG mode than in other modes, it can be more easily affected by extraneous noise. Check the operating environment before use.
- These sensors are only for indoor use.
- Avoid dust, dirt, and steam.
- Take care that the product does not come in direct contact with water, oil, grease, or organic solvents, such as, thinner, etc.
- This sensor cannot be used in an environment containing inflammable or explosive gasses.
- Never disassemble or modify the sensor.

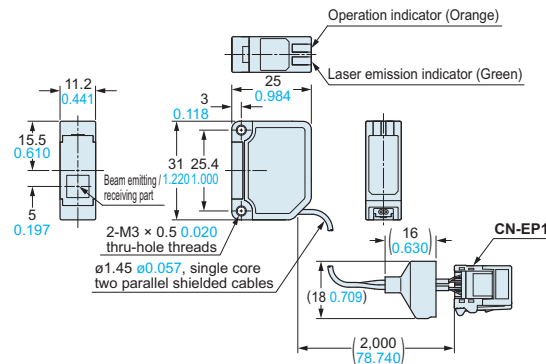
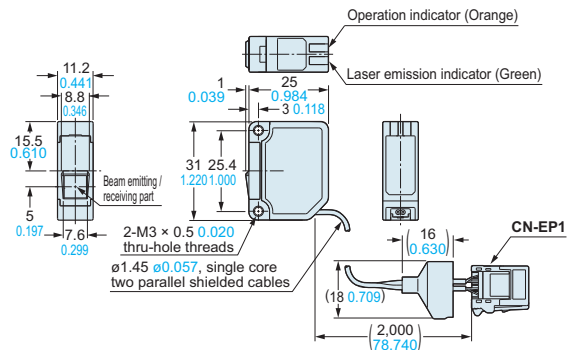
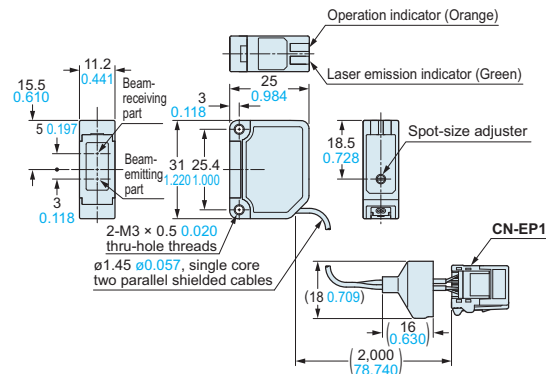
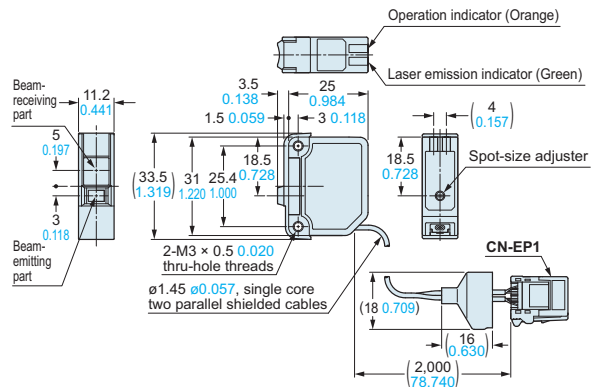
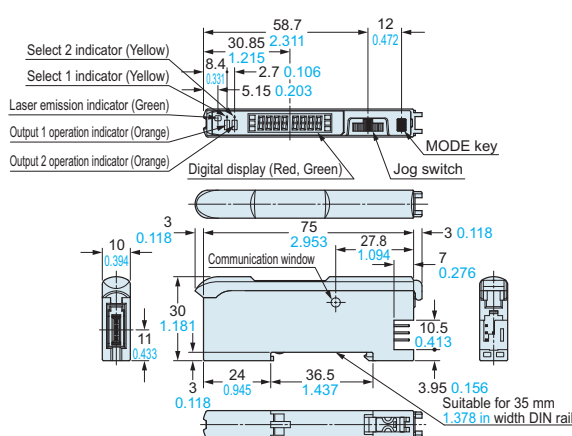
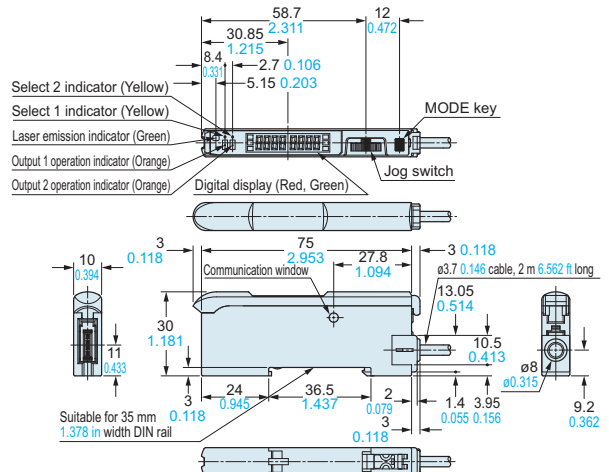
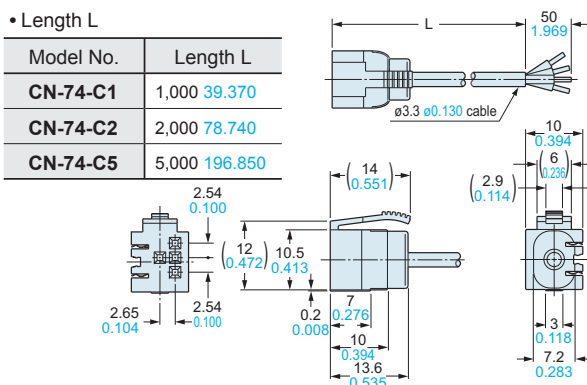
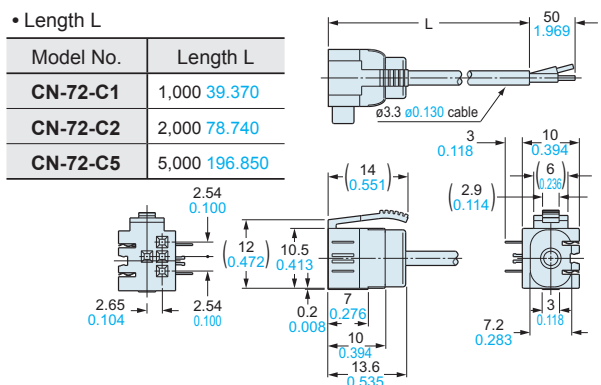
FIBER
SENSORSLASER
SENSORSPHOTO-
ELECTRIC
SENSORSMICRO
PHOTO-
ELECTRIC
SENSORSAREA
SENSORSLIGHT
CURTAINS/
SAFETY
COMPONENTSPRESSURE /
FLOW
SENSORSINDUCTIVE
PROXIMITY
SENSORSPARTICULAR
USE
SENSORSSENSOR
OPTIONSSIMPLE
WIRE-SAVING
UNITSWIRE-SAVING
SYSTEMSMEASURE-
MENT
SENSORSSTATIC
ELECTRICITY
PREVENTION
DEVICESLASER
MARKERS

PLC

HUMAN
MACHINE
INTERFACESENERGY
CONSUMPTION
VISUALIZATION
COMPONENTSFA
COMPONENTSMACHINE
VISION
SYSTEMSUV
CURING
SYSTEMSSelection
GuideAmplifier
Built-inAmplifier-
separated**LS-500****LS-400**

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

LS-H91(-A) LS-H91F(-A) Sensor head**LS-H92 LS-H92F Sensor head****LS-H21(-A) LS-H21F(-A) Sensor head****LS-H22 LS-H22F Sensor head****LS-401 LS-401P LS-403 Amplifier****LS-401-C2 LS-401P-C2 Amplifier****CN-74-C1 CN-74-C2 CN-74-C5 Main cable (Optional)****CN-72-C1 CN-72-C2 CN-72-C5 Sub cable (Optional)**

Selection Guide
Amplifier Built-in
Amplifier-separated

LS-500

LS-400

DIMENSIONS (Unit: mm in)

MS-CX-4

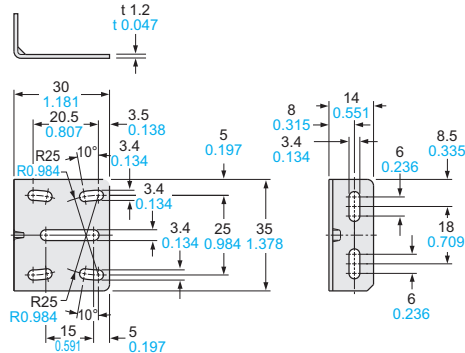
Sensor head mounting bracket (Optional)

MS-CX-3

Sensor head mounting bracket (Optional)

MS-CX-4

Sensor head mounting bracket (Optional)

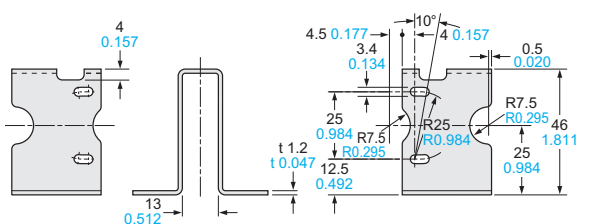


Material: Stainless steel (SUS304)

Two M3 (length 12 mm [0.472 in](#)) screws with washers are attached.

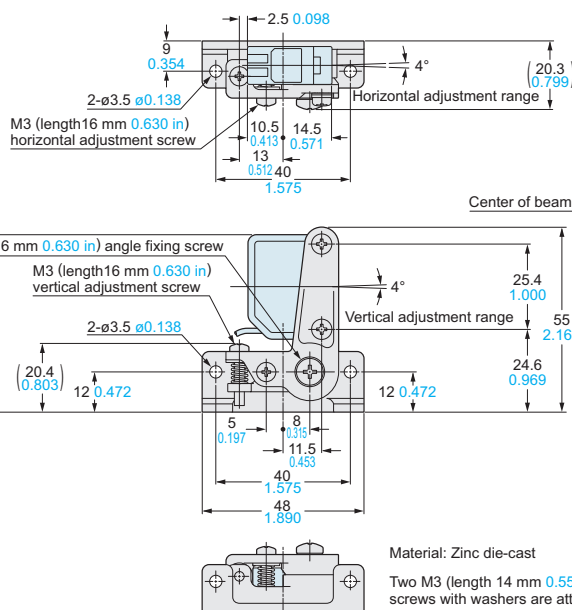
Material: Stainless steel (SUS304)

Two M3 (length 12 mm 0.472 in) screws with washers are attached.



MS-CX-11

Sensor mounting bracket for beam axis alignment (Optional)



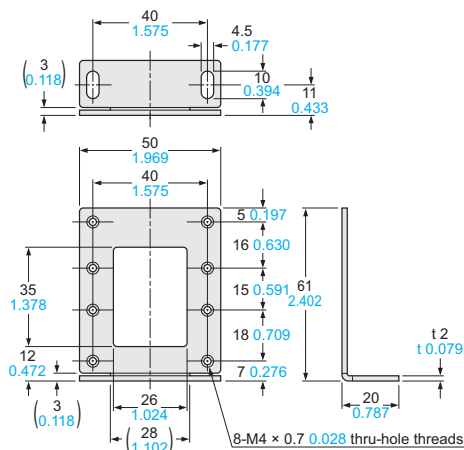
Material: Zinc die-cast

Two M3 (length 14 mm **0.551 in**) screws with washers are attached.

MS-RF23

Reflector mounting bracket for **RF-230** (Optional)

Assembly dimensions



Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)

Two M4 (length 10 mm [0.394 in](#)) screws with washers are attached.

