# For technical support of Optex IO-LINK contact Ramco Innovations today. Got an application and need help - email us at nsales@ramcoi.com

**FASTUS** 

# **INSTRUCTION MANUAL**

IO-Link Digital I/O Module UR-DS16D

(16-point Input Module)







### OPTEX FA CO., LTD.

Thank you for purchasing the UR-DS16D IO-Link Hub. This manual includes the information required to use the UR-DS16D. Please read this manual carefully before use, and fully understand the functions and performance before using this product correctly. Also, keep this manual in a safe place after reading it, and always keep it handy.

## **Safety Precautions**

Safety precautions for ensuring safe operation of this product are displayed as follows with the following symbols.


Precautions listed here describe important information about safety. Make sure to follow them accordingly.

## Safety Symbols

<b><b>∆WARNING</b></b>	Indicates that any improper operation or handling may result in moderate or minor injury, and in rare cases, serious injury or death. Also indicates a risk of serious property damage.
<b>∴</b> CAUTION	Indicates that any improper operation or handling may result in minor injury or property damage.

#### **↑** WARNING

0	Do not disassemble, repair, modify, deform under
	pressure or attempt to incinerate this product.
	Doing so may cause injury or fire.



Doing so may cause a fire or damage the product. This product is not explosion-proof and should not be used around flammable or explosive gases or liquids. Doing so may cause ignition resulting in an explosion or fire.

Do not use air dusters or any spray that uses flammable gas around the product or on the inside of the product. Doing so may cause ignition resulting in an explosion or fire.

Do not use this product in environments other than industrial environments. If used in other environments, it may cause induction and

radiation interference.

Do not install this product or its cables in any of the following locations. Doing so may cause a fire, damage or a malfunction.

1. Locations where dust, salt, iron powders or vapor

- (steam) is present. 2. Locations subjected to corrosive gases or flammable gases
- 3. Locations where water, oil or chemical splashes may occur
- 4. Locations where heavy vibrations or impacts may occur. 5. Locations where the ambient temperature exceeds the rated range.
- 6. Locations subject to rapid temperature changes (or where condensation occurs).
- 7. Locations with strong electric or magnetic fields.

8. Outdoor locations or locations subject to direct light.

Do not use the product at voltages or with AC power supplies that exceed the rated voltage. Doing so may cause a fire or damage the product

## What to do in the event of a malfunction such as smoke being emitted from the product: If you detect any malfunction including emission of smoke, abnormal smells or sounds or the body becoming very hot, immediately stop operating the product and turn off the power. Failure to do so can cause fire.

Repairing the product is dangerous and should in no way be performed by the customer. Contact an OPTEX FA sales representative for repairs.

What to do if water enters the product: If water or any other liquid enters the product or the cable, immediately stop operating the product and turn off the power. Using the product in this condition may cause a fire.

	power. Osing the product in this condition may cause a me.
	<b>∆</b> CAUTION
8	Do not touch this product or the cable with wet hands. Incorrect wiring can cause product failure or malfunction.
⚠	When wiring this product, do so properly according to this manual and specified instruction manuals.  Incorrect wiring can cause product failure or malfunction.
$\triangle$	Connect only specified cables to this product. Use of cables other than those specified can cause malfunction.
Δ	Keep wiring separate from high voltage and motor circuits. Using the same wiring can cause malfunction or failure. If this is unavoidable, shield with a conductor such as an earthed conduit.
⚠	Install this product as far away as possible from high- voltage equipment, equipment that generates large switching surges and equipment that generates noise, such as welding machines or inverter motors.
0	Use this product with the end plate (sold separately) mounted to the DIN rail.  Make sure locking mechanisms are locked before use.
0	Tighten the mounting screws that attach the power terminal block to the main unit with a torque value of 0.25 N·m or less.
$\triangle$	Do not apply torsional stress to cables. Doing so can cause cables and connectors to malfunction. Secure the communications cable drawn out of this product within lengths of 30 cm to ensure no load is applied to the product.
0	Do not drop this product or subject it to strong impact or vibrations. Doing so can cause malfunction.
<u>A</u>	This product generates heat during operation, so do not maintain physical contact for long periods of time.  Doing so can cause low-temperature burns, etc.
$\triangle$	Use this product within the rated range.
$\bigcirc$	Do not cut power during communication.
0	Make sure to turn OFF the power before connecting or disconnecting cables and connectors. Connection or disconnection while running can cause malfunction.
Λ	Always hold the connector when connecting or disconnecting cables and do not apply excessive force to cables.
<u>^</u>	When removing a connector, do not touch the terminals inside the connector or allow foreign objects to get inside.
0	When using power cables or commercially available switching regulators, make sure the frame ground (FG) is grounded.
0	Wait until after transient state (approx. 2 sec.) when power is turned ON before use.
0	Make sure to use an isolation transformer for DC power supply.
0	If a surge occurs in the power supply used, use a surge absorber for the source of generation.

## 1. Overview

The UR-DS16D IO-Link Digital I/O Module is a IO-Link digital input unit that transfers 16 points of digital input ON/OFF signals (from a device such as a sensor or switch) to the process input data of an IO-Link master.

It can be used for applications such as connecting to an IO-Link master to expand the number of input points.


# 2. Included Items





- UR-DS16D unit
- Input terminal block; three pieces
- · Power terminal block: one piece
- This instruction manual


# 3. Dimensions

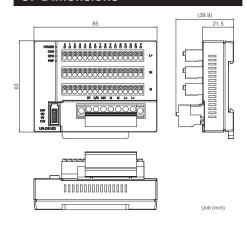

## 4. Installation


Follow the steps below to install this product.

- 1. Hook the upper hook on the back of the product to the DIN rail.
- 2. Push the lower side from the front.
- 3. Push the DIN rail mounting hook up to lock the product in place.



Install this product at least 10 mm away from an adjacent device and structure.

## 5. System Configuration

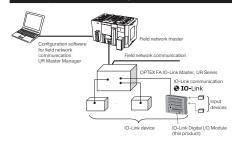


## 6. Connection

### Wiring to the IO-Link Master


Connect the IO-Link master to either the e-CON socket on this product or the push-in terminal block (power/IO-Link terminal block).

· Connecting to the IO-Link communication e-CON socket



Applicable wires should be between AWG 28 to 20 stranded wires with a rated temperature of 75°C or higher.

· Connecting to the IO-Link communication terminals on the power terminal block



Note 1: C/Q is connected internally with the IO-Link communication e-CON socket.

Applicable wires should be between AWG 24 to 12 stranded wires with a rated temperature of 75°C or higher.

The length of stripped insulation from the wire for rod type crimp terminal. solid or stranded wires is from 9 to 10 mm

### Wiring to the Input Power Supply

Supply power to input devices to the push-in terminal block.




Applicable wires should be between AWG 24 to 12 stranded wires with a rated temperature of 75°C or higher.

The length of stripped insulation from the wire for rod type crimp terminal, solid or stranded wires is from 9 to 10 mm

#### Wiring to the Input Terminal Block

Connect the wires for power supply and input signal of input devices to the three 16-channel push-in terminal blocks.




Applicable wires should be between AWG 28 to 16 stranded wires with a rated temperature of 75°C or higher.

The length of stripped insulation from the wire for rod type crimp terminal, solid or stranded wires is 10 mm

If this product used in a manner not specified by the manufacturer

the protection provided by this product may be impaired.

# 7. Part Names

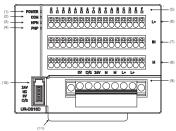

No.	Name	Function			
(1)	POWER LED (green)	Turns on when the unit power is turned on.			
(2)	COM LED (green)	Illuminated: After startup, before IO-Link communication is established 1 second on 0.1 second off: IO-Link communication established 0.55 second on 0.55 second off: Find me 0.1 second on 0.55 second off: IO-Link communication cutoff			
(3)	NPN LED (green)	Turns on green when the inputs are set NPN.			
(4)	PNP LED (orange)	Turns on orange when the inputs are set PNP.			
(5)	0 to F LEDs (orange)	Displays the ON/OFF status of inputs.			
(6)	Input power supply terminal block (L+)	Supplies 24 VDC to input devices.			
(7)	Input signal terminal block (IN)	Takes signals from input devices.			
(8)	Input power supply terminal block (M)	Supplies 0 V to input devices.			
(9)	Power terminal block (0 V, +24 V)	Supplies unit power (+24 V, 0 V) and I/O power (L+, M). This seven-pole removable connector has a pitch of 5.08 mm and a rating of 12 A. It uses AWG 24 to 12 wires. It is wired in parallel with the input power supply. Unit power (+24 V, 0 V) and C/Q are wired to the IO-Link master, and unit power is supplied by the IO-Link master, and unit power is supplied by the IO-Link master. Unit power (+24 V, 0 V) and C/Q are connected internally with the terminals of the e-CON socket, and either the power terminal block or e-CON socket can be connected to the IO-Link master.			
(10)	e-CON socket (four poles)	Unit power (+24 V, 0 V) and C/Q can be wired to the IO-Link master via the e-CON socket.			
(11)	DIN rail mounting hook	Slides for attaching/removing the product to/from the DIN rail.			

# 8. Specifications

### General Specifications

Item		Specifications				
Power supply voltage		24 VDC +/-15% (*1)				
Current consum	ption	50 mA max. (for 24 VDC)				
Operating temp	erature	0 to +55°C (no freezing)				
Operating humid	dity	5 to 95% RH (no condensation)				
Storage tempera	ature	-25 to +75°C (no freezing)				
Storage humidit	у	5 to 95% RH (no condensation)				
Vibration resista	nce	IEC 61131-2 compliant				
Shock resistanc	е	IEC 61131-2 compliant				
Atmosphere		No corrosive gas				
Operating altitud	de	0 to 2000 m				
Installation local	tion	In door use				
Degree of protein	ction	IP20				
Measurment ca	tegory	Il or lower				
Pollution degree	•	2 or lower				
Applicable	EMC	EMC Directive (2014/30/EU)				
regulations	Environment	RoHS Directive (2011/65/EU), China RoHS (Regulation 32				
Applicable stand	dard	EN 61131-2				
NRTL certification	on	Under application				
Company stand	ards	Noise resistance: Feilen Level 3 cleared				
Compatible DIN	rail	TH35-7.5Fe, TH35-7.5AI				
Cable length		Maximum 20m (between IO-Link Master and Remote I/O Ur				
Compatible wire		Power terminal block: AWG 24 to 12 Input terminal block: AWG 28 to 16				
Material		Unit: PC; DIN rail mounting hook: POM; Terminal block: P.				
Weight		Approx. 115 g (including terminal blocks, when not wired				
Included access	ories	Instruction manual (this document), input terminal block: three pieces, power terminal block: one piec				
1 Use a Class 2 pe	ower supply	or a power supply compliant with SELV (Safety Extra				

Low Voltage) circuit and LIM (Limited Energy Circuit) circuit standards.

### ■ IO-Link Specifications

Item	Specifications				
Host communication interface	IO-Link (operates as device)				
Process input data byte count	2 bytes				
Process output data byte count	1 byte				
Minimum cycle time	0.4 ms				
IO-Link revision	1.1				
Communication speed	COM3 (230.4 kbps)				
Communication function operation power supply	IO-Link power supply				

## Input Specifications

Item	Specifications				
Input points	16				
Type of input	Source, PNP, or Sink, NPN, switchable for all channels (Default value: Switched by process output data)				
Dielectric withstanding voltage	500 VAC for one minute between I/O terminal batch and IO-Link batch				
Insulation resistance	10 M $\Omega$ or greater isolation between all I/O terminals and all IO-Link terminals at 500 VDC				
Common	Shared with 16 channels				
Rated input voltage	24 VDC including ripple (P-P) 5%				
Rated input current (typical values)	4.9 mA				
Insulation method	Photocoupler insulation				
Maximum number of simultaneous input points	100% simultaneous ON				
Voltage and current at ON	15 V or higher, 3 mA or higher				
Voltage and current at OFF	8 V or less, 1.5 mA or less				
Input resistance	4.7kΩ				
Input response time	0 to 200 ms (1 ms unit, default value of 10 ms)				

# 9. Process Data

The process data exchanged by the product with the IO-Link master using IO-Link cyclic communication is as follows.

Process data	Byte	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
Process input data	+0	Input F status	Input E status	Input D status	Input C status	Input B status	Input A status	Input 9 status	Input 8 status
Process input data	+1	Input 7 status	Input 6 status	Input 5 status	Input 4 status	Input 3 status	Input 2 status	Input 1 status	Input 0 status
Process output data	+0		Reserved						

<sup>\*1</sup> Only when the value of index number 96 (type of input) in the service data is "0", the specification (0:PNP, 1:NPN) in the process output data is valid. When the service data other than "0", the type of input is fixed by the service data specification (1: PNP input, 2: NPN input).

IO-Link process data is transferred in big endian format. The table above is also in big endian format.

The IO-Link master UR series from OPTEX FA transfers IO-Link process data converted into little endian format to the host network by default, so the byte order will be the reverse of that in the table above.

# 10. Service Data

The service data for this product that can be read and written via IO-Link ISDU handling is as follows.

Name	Index number	Subindex number	Read/ Write <sup>(*1)</sup>	Backup Subject	Data byte count	Default value	Setting Details
System command	2	0	W		1	-	130: Initialization of setting value 131: Stops IO-Link communication after reverting setting values to default values (Back-to-Box)
Device lock	12	0	R/W	✓	2	0	0: Unlocks the storage function. 2: Storage function lock.
Tag name	24	0	R/W	✓	32	*2	Can be used to set a name for this unit, such as the device function or installation location.
Type of input	96	0	R/W	<b>~</b>	1	0	Type of input (PNP/NPN) of CH0 to F is switched using the specified bit of the process output data.     CH0 to F Used as PNP     CH0 to F Used as NPN
		1	R/W	✓	1	10	0 to 200: ON/OFF delay timer for CH0 input chattering prevention (unit: ms)
Input filter	97	2	R/W	✓	1		Same as above, CH1
input intoi			1	1		10	<del> </del>
		16	R/W	✓	1		Same as above, CHF
Internal temperature	161	0	R		2	-	Temperature of internal board, signed integer value (unit: 0.1 ° C)
Operating time	162	0	R		4	-	Operating time (unit: 7.5 minutes)
Device identification request (Find me)	204	0	R/W		1	0	0: Normal status 1: Flash the COM LED at 0.55 second intervals

<sup>\*1</sup> R: Read only, W: Write only, R/W: Read/Write \*2 The default value is 32 "\*" (asterisk) characters

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

\*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense

Support for the China RoHS directive

For details on the support for the China RoHS (the Administrative Measure on the Control of Pollution Caused by Electronic Information Products), see the following

https://www.optex-fa.com/rohs cn/

OPTEX FA CO., LTD.

[Headquarters]